

# DARMOSHARK MI GAMING MOUSE QUICK START GUIDE

运营商: 香港飞翔科技集团有限公司  
 制造商: 深圳市宝安区智源电子厂 地址: 深圳市宝安区沙井南浦路  
 Operator: Motospeed Technology Group Limited  
 Manufacturer: Mototech Technology Group Limited  
 Address: Nanpu Road, Shajing, Bao'an Shenzhen P.R. China  
 HOTLINE: 4008-860-368  
 以上数据仅供参考, 实物与图片可能不相符!  
 最终解释权归本公司所有  
**WWW.DARMOSHARK.CN**



按REP按键, 125HZ/8ms红色闪烁三次; 再次按下REP按键, 250HZ/4ms紫色闪烁三次;  
 再次按下REP按键, 500HZ/2ms蓝色闪烁三次; 再次按下REP按键, 1000HZ/1ms绿色闪烁三次;  
 The return rate can be adjusted through the bottom REP button,  
 Press the REP button, the 125HZ/8ms red light flashes three times;  
 Press the REP button again, the 250HZ/4ms purple light flashes three times;  
 Press the REP button again, the 500HZ/2ms blue light flashes three times;  
 Press the REP button again, the 1000HZ/1ms green light flashes three times;

- |                              |            |
|------------------------------|------------|
| 1. Left button               | 1. 左键      |
| 2. Right button              | 2. 右键      |
| 3. Roller key                | 3. 滚轮键     |
| 4. Forward button            | 4. 前进键     |
| 5. Backward button           | 5. 后退键     |
| 6. DPI switch button         | 6. DPI键    |
| 7. Report rate switch button | 7. REP回报率键 |
| 8. Light switch button       | 8. 灯开关键    |

## SYSTEM REQUIREMENTS

Windows XP /Vista/Win7/Win8/Win10/  
Macintosh OS

## 系统要求

Windows XP /Vista/Win7/Win8/Win10/  
Macintosh OS

### 中文

尺寸: 117x62x40MM  
 重量: 77 ± 5g  
 材质: ABS  
 线长: 1.8M  
 脚贴: 铁氟龙

### English

Size: 117x62x40MM  
 Weight: 77 ± 5g  
 Material: ABS  
 Line length: 1.8M  
 Foot sticker: Teflon

### Español

Tamaño: 117 x 62 x 40MM  
 Peso: 77 ± 5g  
 Material: ABS  
 Longitud de la línea: 1,8 M  
 Etiqueta engomada del pie: teflón

### Türk dili

Boyut: 117 x 62 x 40MM  
 Ağırlık: 77 ± 5g  
 Malzeme: ABS  
 Hat uzunluğu: 1.8M  
 Ayak etiketi: Teflon

### Português

Tamanho: 117 x 62 x 40 MM  
 Peso: 77 ± 5g  
 Material: ABS  
 Comprimento da linha: 1,8M  
 Adesivo de pé: Teflon

### Українська

Розмір: 117 x 62 x 40 мм  
 Вага: 77 ± 5г  
 Матеріал: АБС  
 Довжина лінії: 1,8 млн  
 Наклейка для ніг: тефлон

### Ελληνικά

Μέγεθος: 117 x 62 x 40MM  
 Βάρος: 77 ± 5g  
 Υλικό: ABS  
 Μήκος γραμμής: 1,8M  
 Αυτοκόλλητο ποδιών: Teflon

### Deutsch

Größe: 117 x 62 x 40 mm  
 Gewicht: 77 ± 5g  
 Material: ABS  
 Leitungslänge: 1,8 m  
 Fußaufkleber: Teflon

### Polski

Rozmiar: 117 x 62 x 40 MM  
 Waga: 77 ± 5g  
 Materiał: ABS  
 Długość linii: 1,8 m  
 Naklejka na stopę: teflon

## 电气参数

1. 内部光电IC为原相“PMW3389”
2. 接口：USB2.0
3. 最高分辨率：16000dpi
4. DPI模式调节：400红/800冰蓝（默认）/1600绿/3200紫红/4800黄/6400橙/8000蓝/16000白（灯颜色停顿3秒后恢复到灯效模式）
5. 工作电压：DC 5V±5%，工作电流：≤200mA
6. 开关使用寿命：左右2000万次
7. 图像处理FPS：12000帧/秒
8. 最大速度：400IPS
9. 加速度：50g
10. 可支持驱动自定义

## 跑马灯效模式参数

底部灯泡图标可两段操作开/关装饰灯。

通过组合前进键加滚轮键调节灯效模式，后退键加滚轮键调节参数。

1. 流彩跑马模式：按下后退键加滚轮键，为流彩跑动速度：高速，中速，低速，停止。
2. 霓虹模式：按下后退键加滚轮键，为变化速度：低速，中速，高速。
3. 关灯模式
4. 常亮模式：按下后退键加滚轮键，可调节九种颜色。
5. 呼吸模式：按下后退键加滚轮键，可调节九种颜色。

备注：出厂默认四段，通过驱动可调节灯效。

## 鼠标无法工作及故障排除

1. 检查USB连接线是否妥当连接在电脑上。
2. 试着将鼠标连接至电脑的其它USB连接端口。
3. 尝试将电脑重新开机。
4. 若仍然无法工作,试着将鼠标连接到其他电脑上。

以上图片仅供参考,请以实物为标准

## 工作条件

1. 温度：-10℃—50℃
2. 湿度：不高于85%RH

## ELECTRICAL PARAMETERS

1. The internal photoelectric IC is the original phase "PMW3389"
2. Interface: USB2.0
3. The highest resolution: 16000dpi
4. DPI mode adjustment: 400 red/800 ice blue (default)/1600 green/3200 purple red/4800 yellow/6400 orange/8000 blue/16000 white (Light color will return to light effect mode after 3 seconds pause)
5. Working voltage: DC 5V±5%, working current: ≤200mA
6. Switch life: about 20 million times
7. Image processing FPS: 12000 frames/sec
8. Maximum speed: 400IPS
9. Acceleration: 50g
10. Support driver customization

## PARAMETERS OF LANTERN EFFECT MODE

The light bulb icon at the bottom can be operated in two stages to turn on/off the decorative lights.

Adjust the light effect mode by combining the forward key and the scroll wheel key, and the back key and the scroll wheel key to adjust the parameters.

1. Flow color horse racing mode: press the back button and the scroll wheel button to run the flow speed: high speed, medium speed, low speed, stop.
2. Neon mode: press the back button and the scroll wheel button to change the speed: low speed, medium speed, and high speed.
3. Light off mode
4. Constant light mode: Press the back button and the scroll wheel button to adjust nine colors.
5. Breathing mode: Press the back button and the scroll wheel button to adjust nine colors.

Remarks: The factory defaults to four segments, and the lighting effect can be adjusted by driving.

## THE MOUSE DOES NOT WORK AND TROUBLESHOOTING

1. Check whether the USB cable is properly connected to the computer.
2. Try to connect the mouse to other USB ports of the computer.
3. Try to restart the computer.
4. If it still does not work, try to connect the mouse to other computers.

The above pictures are for reference only, please take the actual product as the standard.

## WORKING CONDITIONS

1. Temperature: -10℃—50℃
2. Humidity: not higher than 85%RH